


Complement to RallyComp Fuel function installation.

The fuel function requires a fuel sensor which has a external power supply. Scenario 1 and 2 below shows different methods of connection.

Scenario 1;

Only RallyComp connected to fuelsensor.

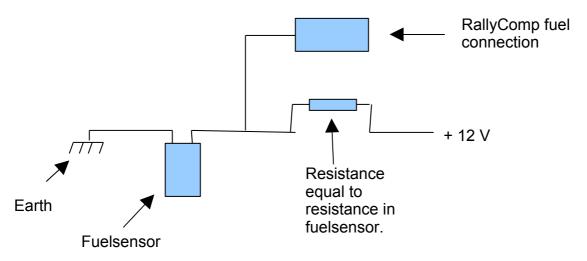

Scenario 2:

